Digiverstas

Full colour label printer

With the full colour label printer, you can create unique coloured labels and stickers. When designing stickers, you can use, for example, photos, logos, text, patterns, frames and colour codes.

With a label printer, you can make labels, signs, crafts, package markings, name cards, visitor and greeting cards, or personalize gift boxes.

The options are 12 mm, 19 mm, 25 mm and 50 mm wide sticker rolls.

The label printer is used on the same computer with the vinyl cutter. Ask the staff for the sticker rolls you will need.

Material fees:

12 mm or 19 mm wide sticker: €0.50 / 10 cm

25 mm or 50 mm wide sticker: €1.00 / 10 cm

You can get more information from the library staff.

Full colour label printer
Brother VC-500W

The sticker printer uses ZINK® Zero-Ink® printing technology, which means that no separate ink is needed. The colour of the stickers is created by heat-activated crystals, already contained in the roll cassettes.

The label printer must be connected to the computer with a USB cable. Labels are designed using the P-touch Editor label design program.

Additional information and ideas for using the label printer can be found on the manufacturer's website:

https://www.brother.fi/labelling-and-receipts/vc-500w

Starting the printer

Turn on the label printer by briefly pressing the power button on the right side.

The device is ready for use when all the lights have stopped flashing and only the sticker roll indicator light is on.
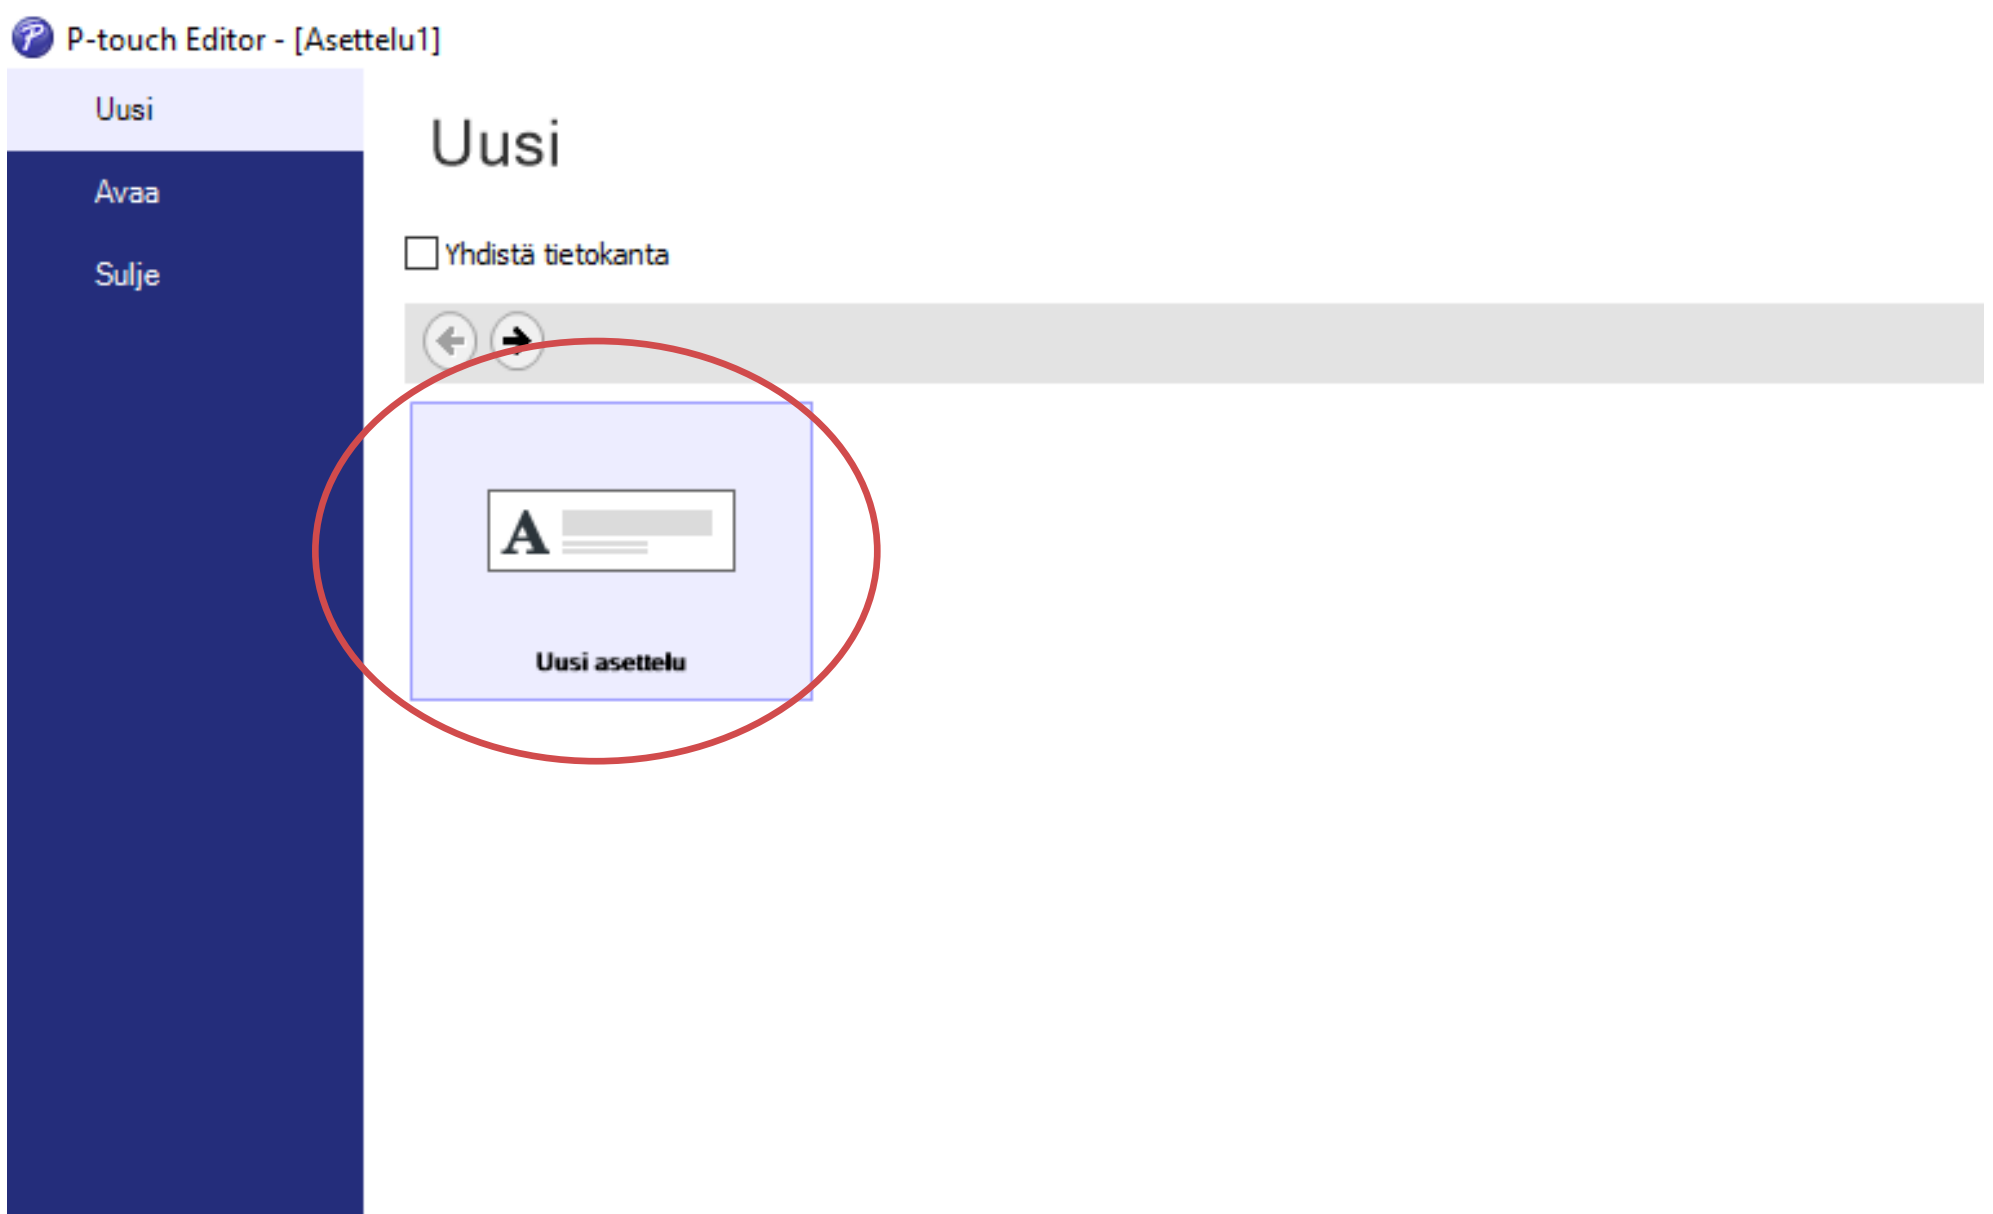
Label design

Open the **P-touch Editor** label design program by clicking the icon on the desktop.
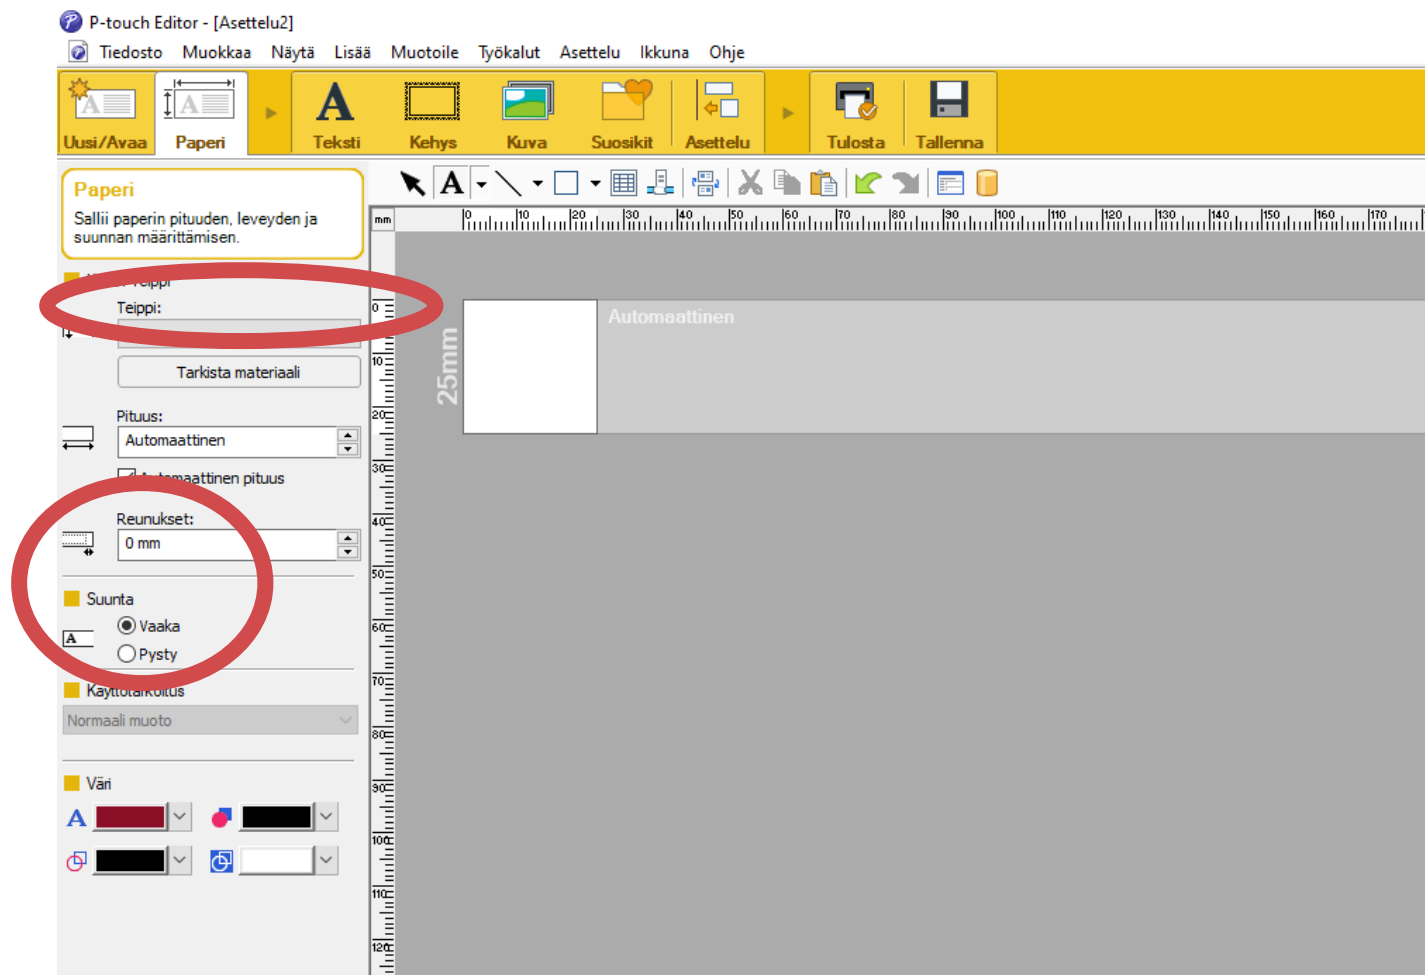

Start designing the label by double-clicking **New Layout / Uusi asettelu**.
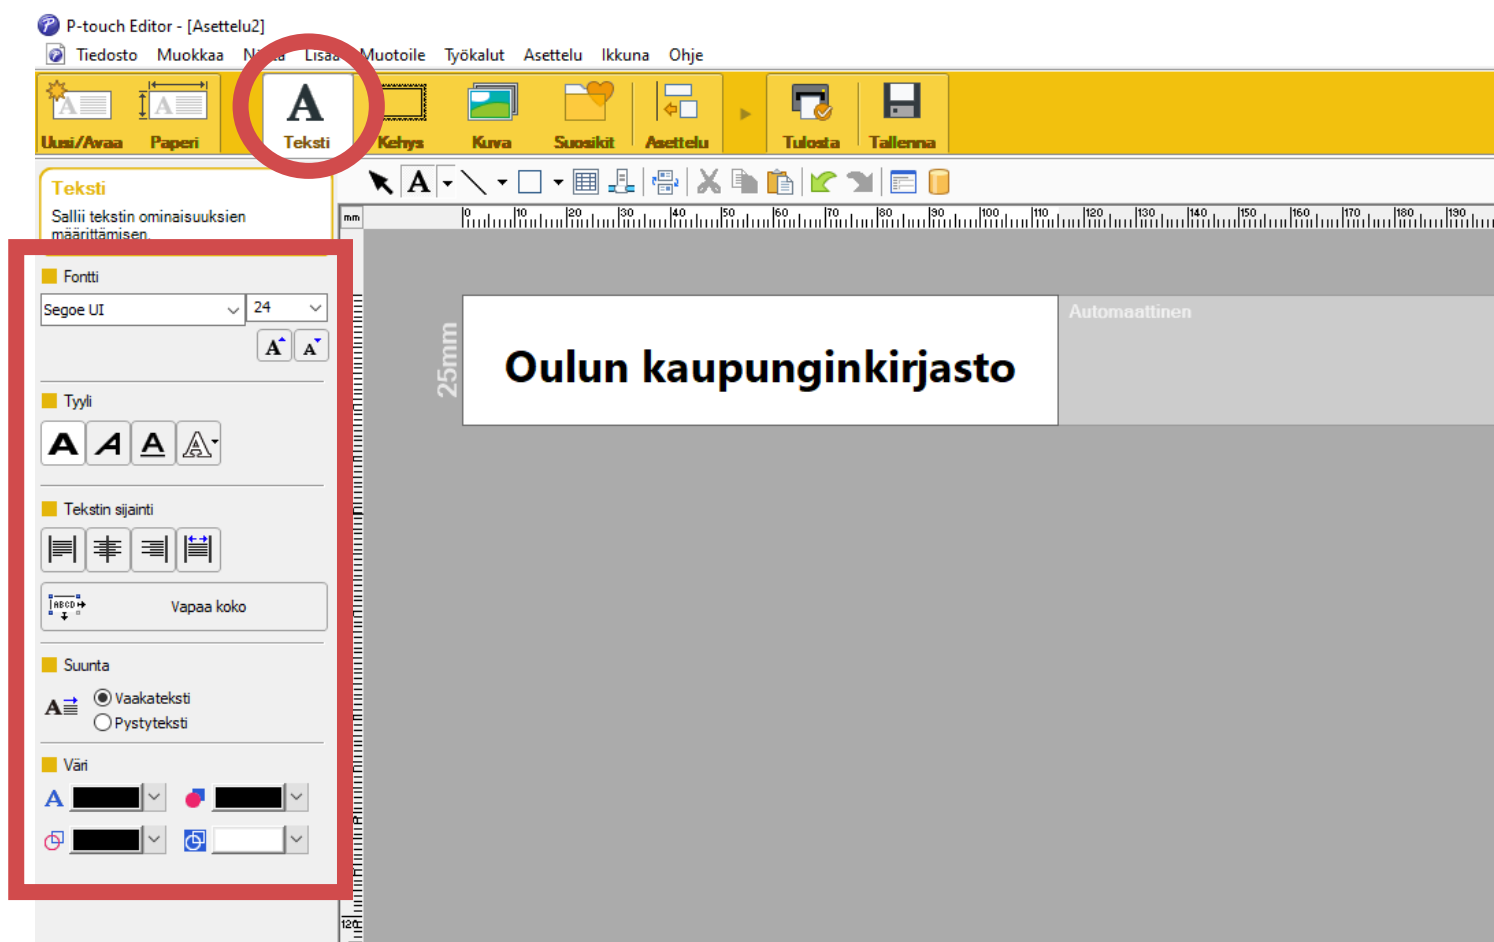
Label design

The label can be designed to be printed either horizontally or vertically. You can make sure that the paper is the correct size in the layout by pressing the **Check material / Tarkista materiaali** button.
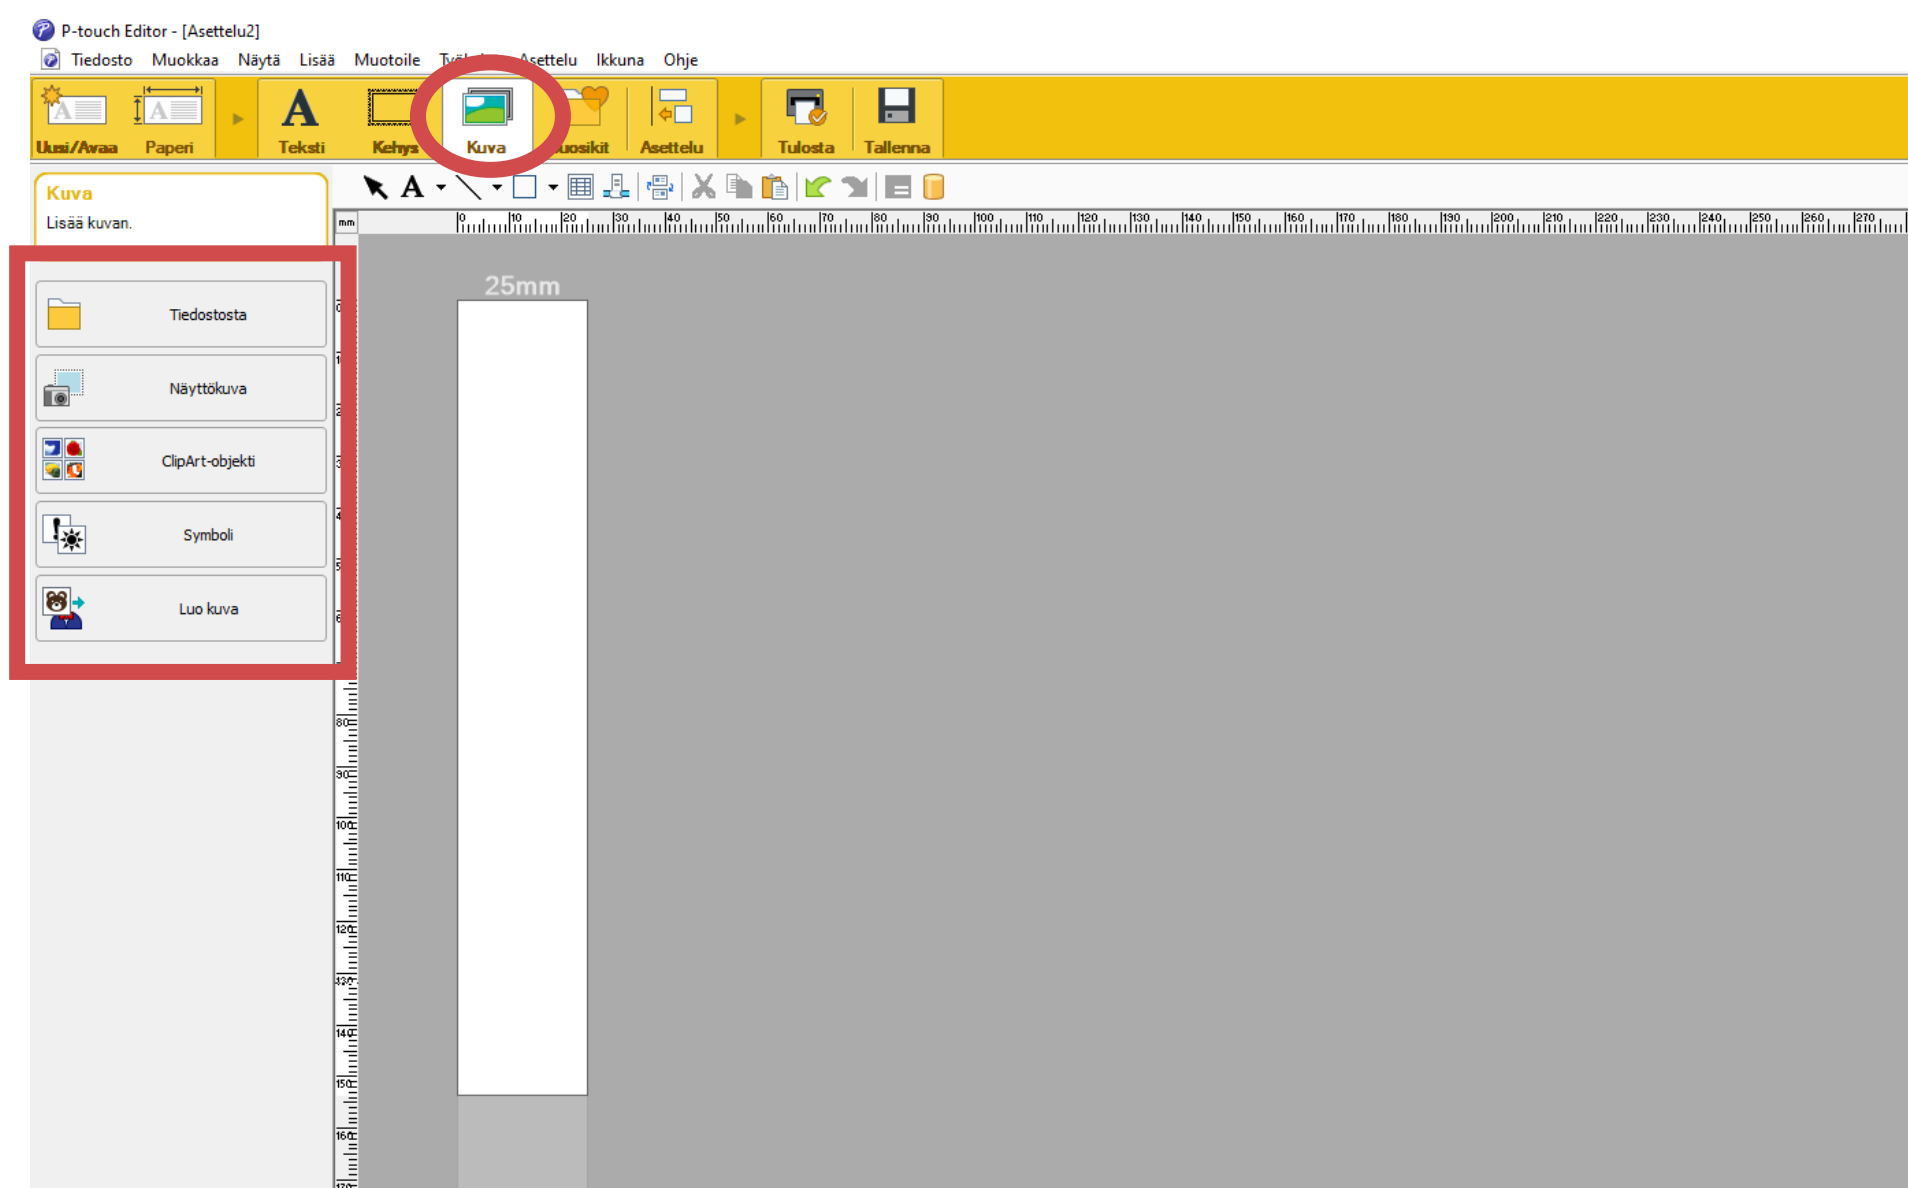

If you want to print text, first click **Text** in the top panel. The text you write will immediately appear in the area depicting the sticker. You can change the font, colour and style of the text in the panel on the left.

Label design

In addition to text, the sticker printer can also print photo stickers. To add your own image to the design program, first click **Image** in the top panel and then **Files** in the side panel. Search for the desired image in the files.
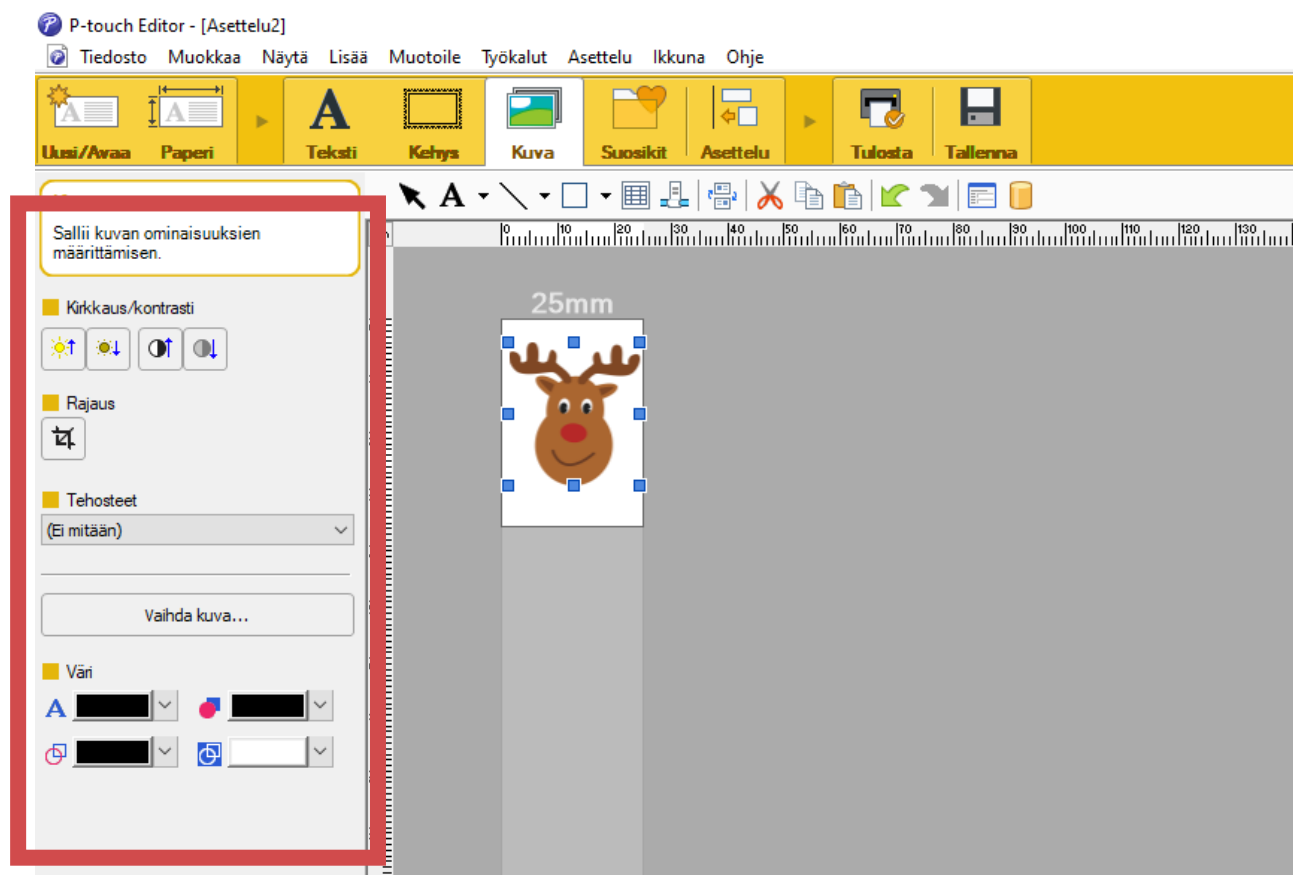
You can import your own photos or other images, for example with a memory stick or from a cloud service. You can also search for an image on the Internet and download it to your computer. Also remember to delete the image you downloaded from your computer.
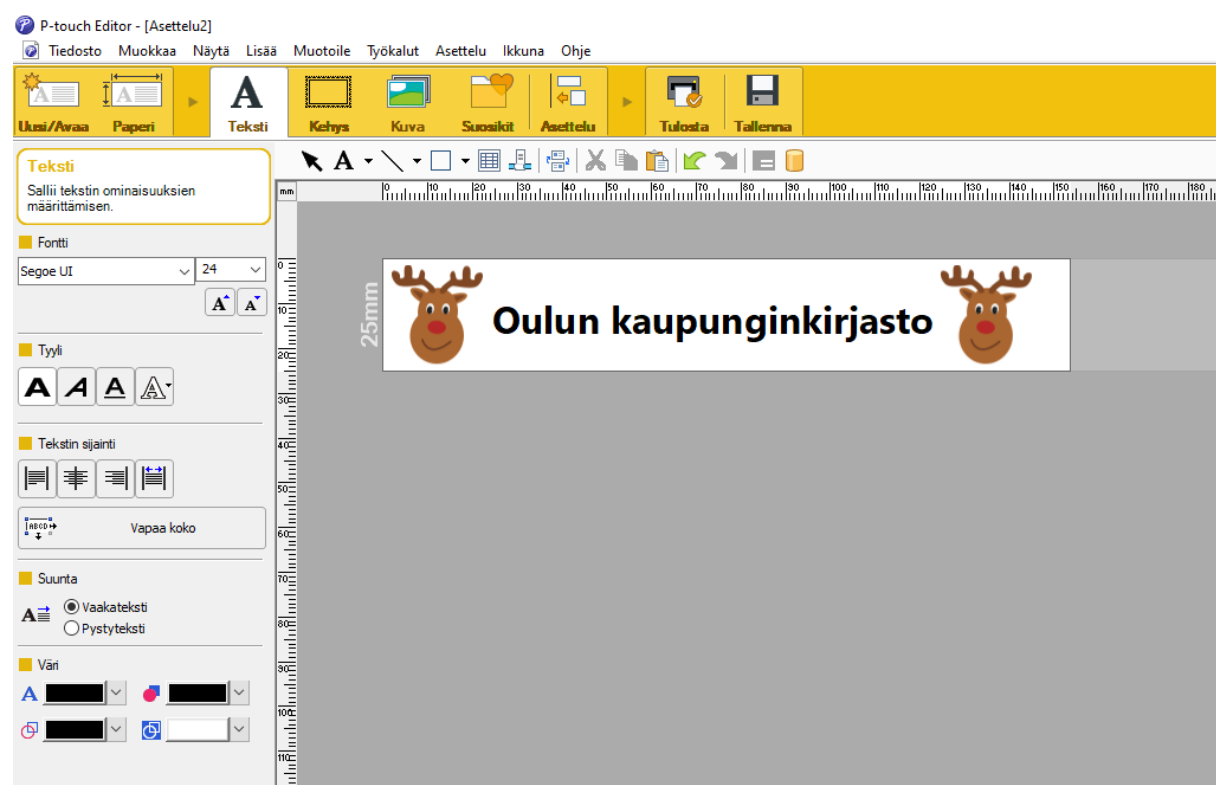

In addition, you can print a screen image or ready-made ClipArt objects and symbols found in the program.

Label design

After adding an image, you can edit it using the settings in the side panel on the left. You can adjust the size of the image by clicking on the image and adjusting the size from the blue dots that appear around the image. Additional settings can also be found by double-clicking the image.
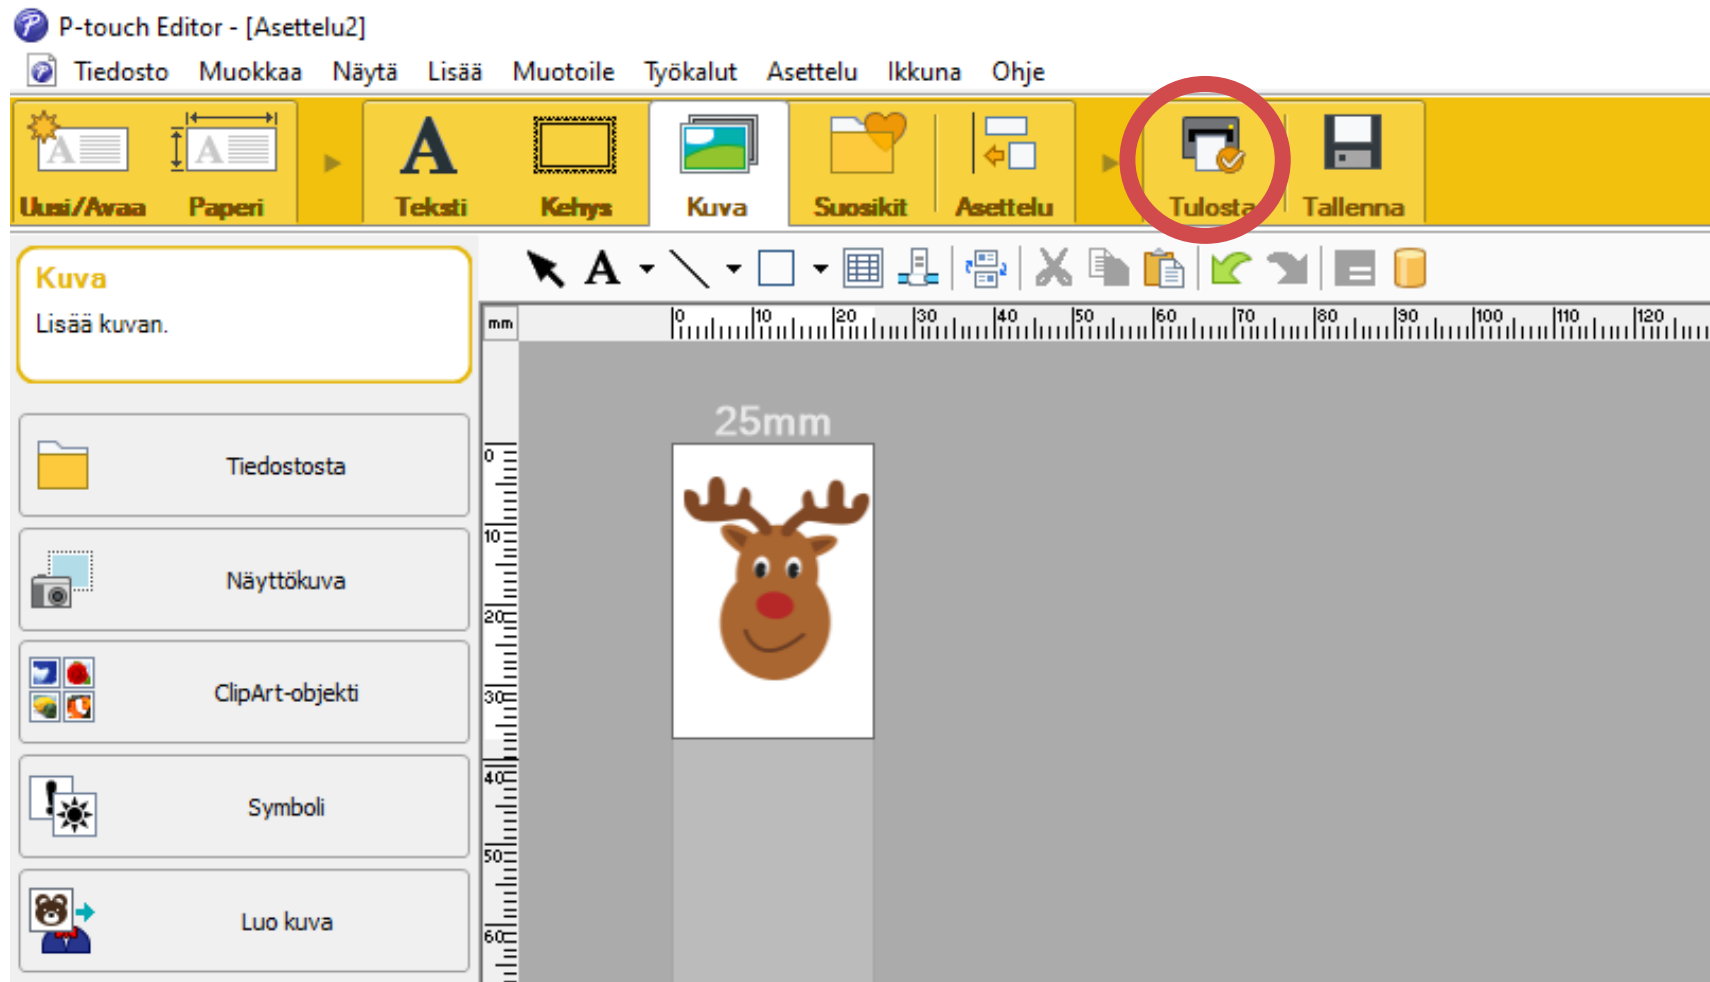

You can print text and images on the same label. You can move text boxes and images by clicking them to make them active, after which you can move them by dragging. You can also edit both the text and the image in the ways mentioned earlier in the instructions.
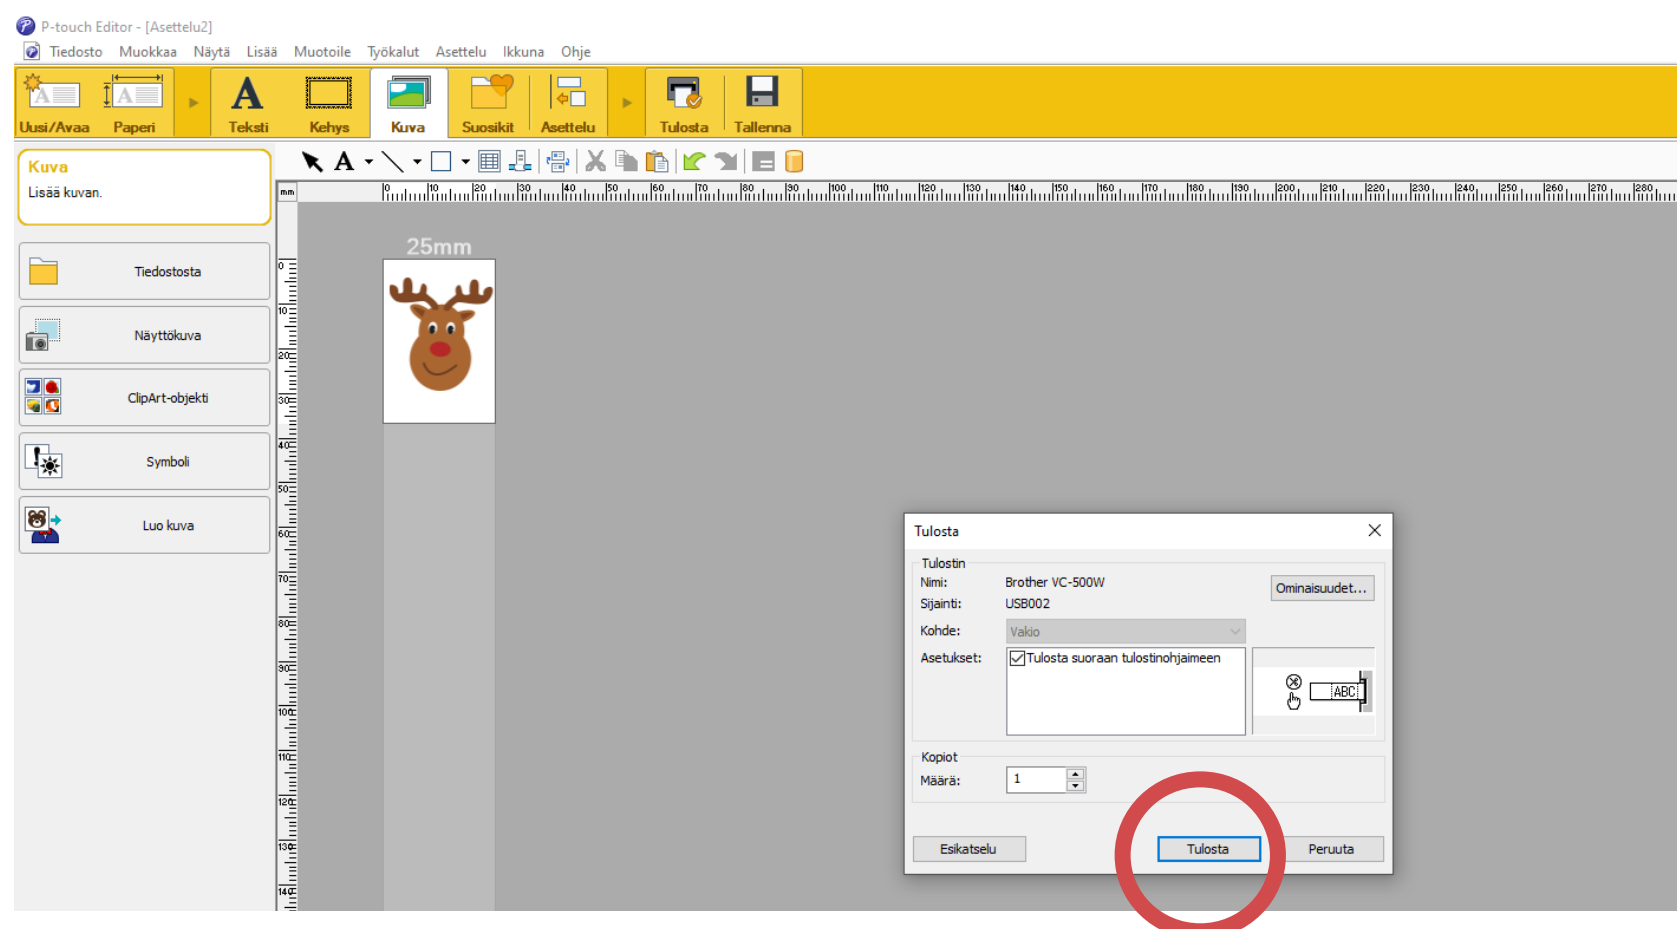
Printing of labels

When you are satisfied with the label you have designed, you can print it by clicking **Print/Tulosta**.

Click **Print/Tulosta** again. After this, the label printer starts printing the label you designed.

OULU KAUPUNGINKIRJASTO

Printing of labels

When the printer stops printing, you can cut the sticker off by sliding your finger from left to right on the printer.
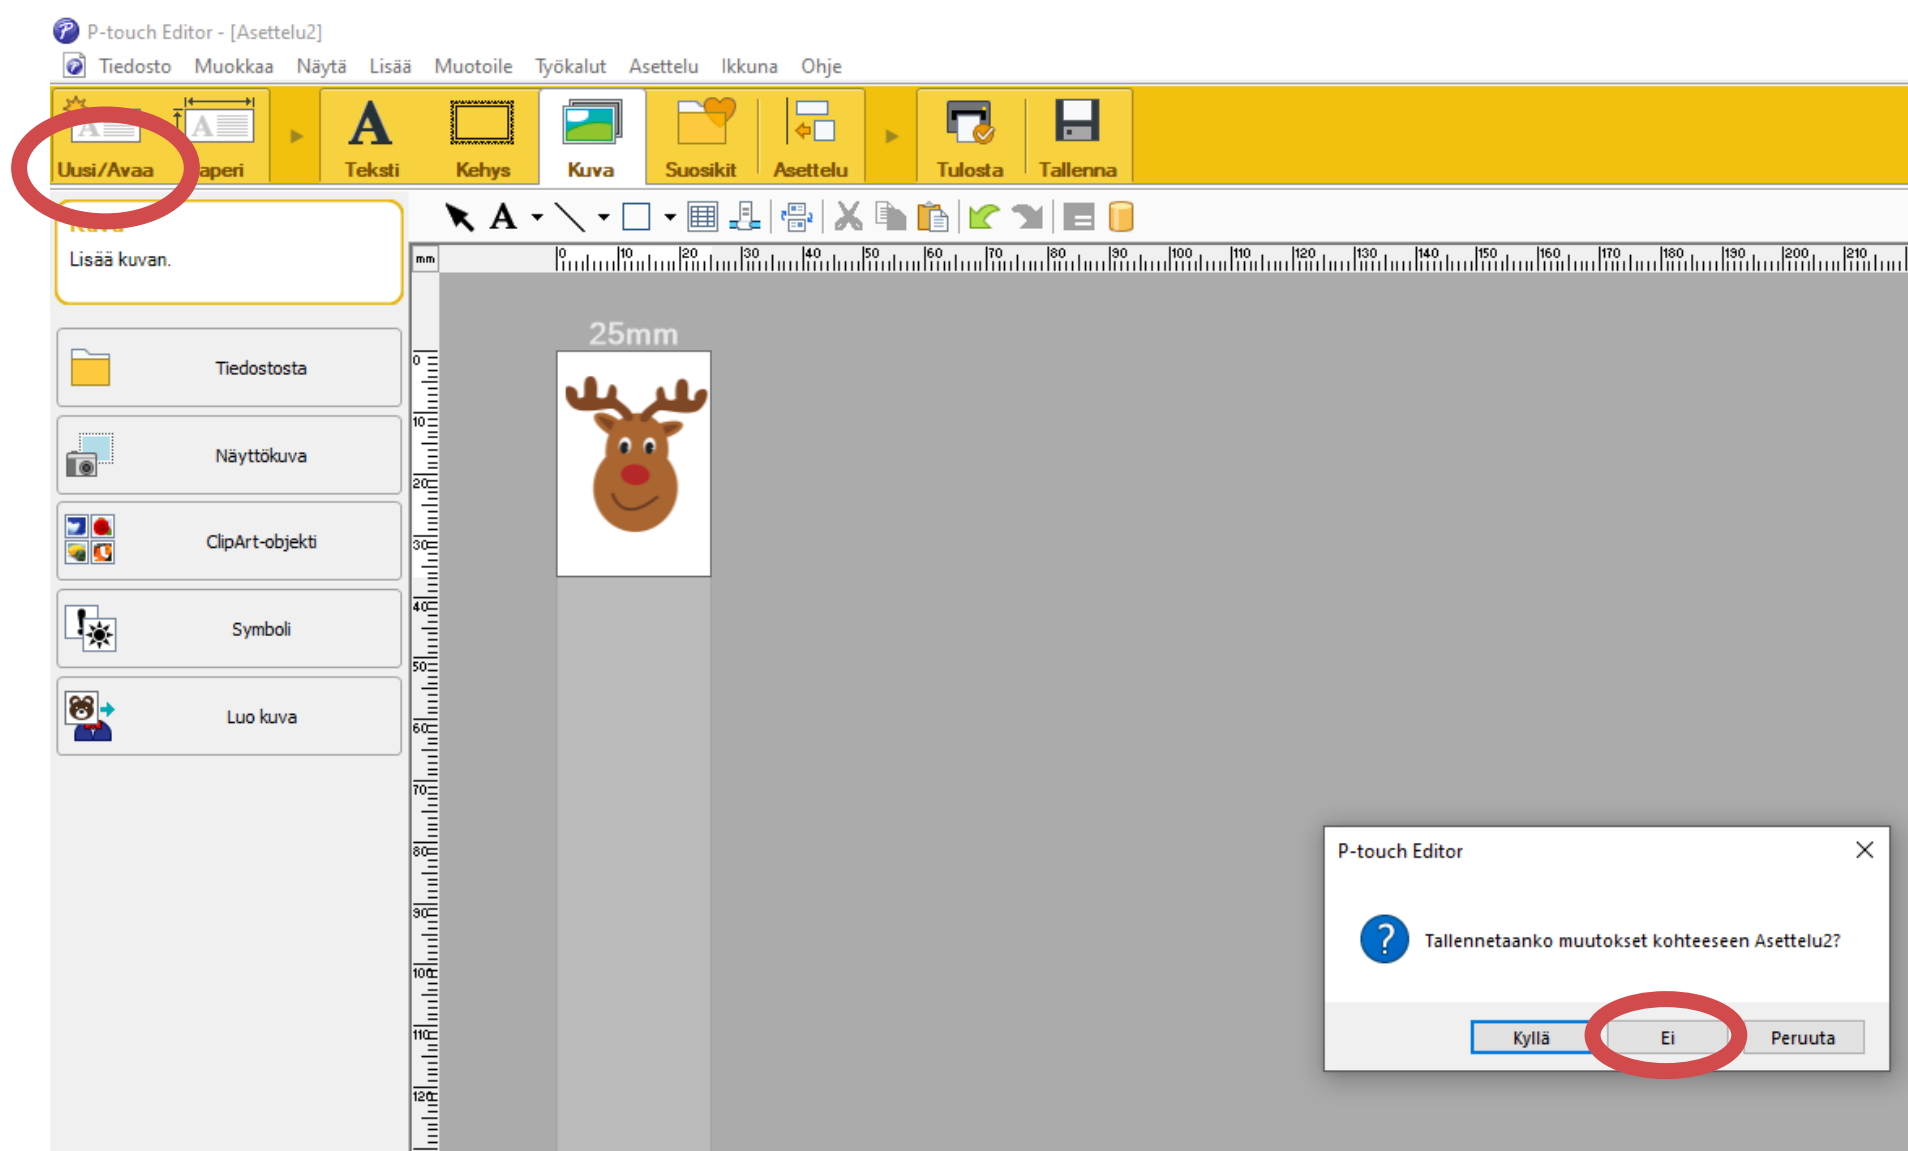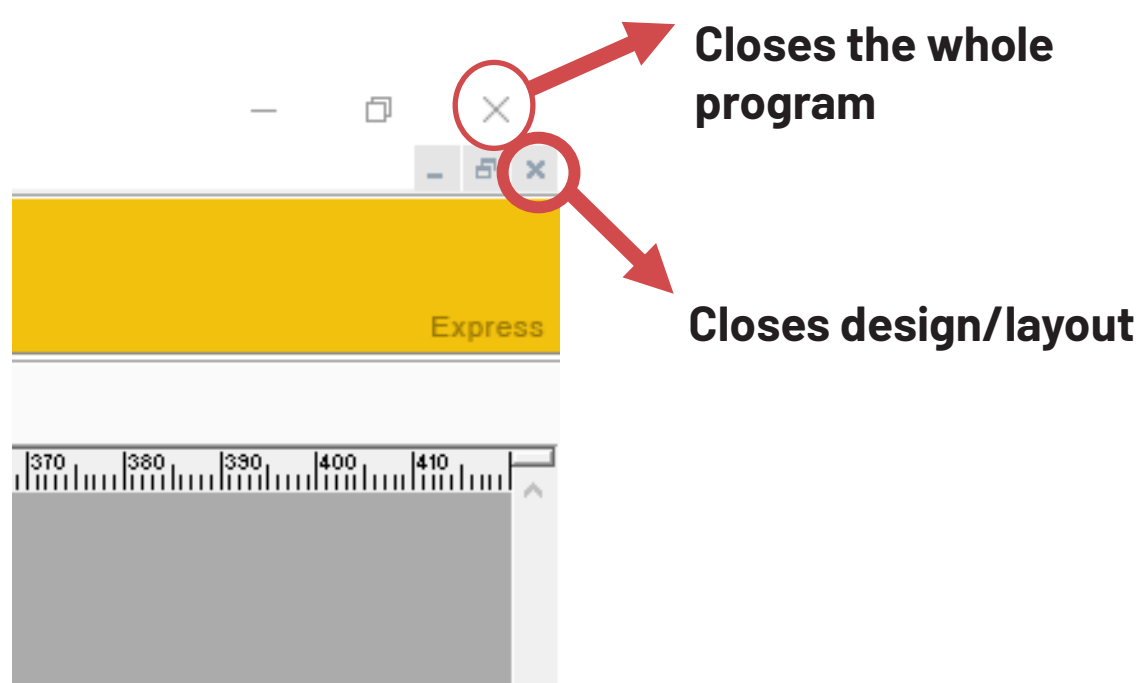
Printing of labels

Ending label design

You can stop working by clicking on the boxes. Do not save changes to the layout. You can open a new layout by clicking **New/Open / Uusi/Avaa** at the top. If you don't want to start a new design, but stop using the program, click the close button on the top right of the program.

Closes the whole program

Closes design/layout

Switching off the label printer

Turn off the label printer by pressing the power button for a few seconds.